

# FUSES & CIRCUIT BREAKERS

1995 Volvo 850

1993-96 FUSES & CIRCUIT BREAKERS  
Volvo


1993-96 850 Sedan  
1994-96 850 Turbo Sedan  
1995-96 850 T-5R Turbo Sedan  
1994-96 850 Wagon  
1994-96 850 Sportswagon  
1995-96 850 T-5R Turbo Sportswagon

## IDENTIFICATION

### FUSE PANEL LOCATION

The fuse panel is located in the engine compartment. A label on the inside of the cover lists the fuse amperage and circuits protected.

### FUSE PANEL IDENTIFICATION

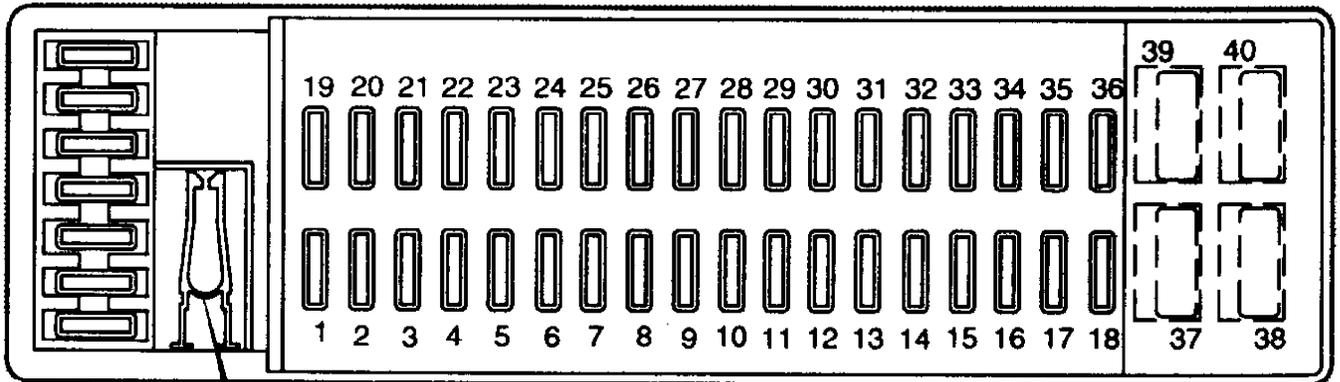

93C45544

Fig. 1: Fuse Panel Identification  
Courtesy of Volvo Cars of North America.

**WARNING:** Always disconnect battery ground cable before servicing "high-current fuses. It is recommended that "high-current" fuses be replaced by a qualified technician.

- \* 1 - 15 Amp  
Fuel Injection, Distributor Ignition, Automatic Gearbox
- \* 2 - 15 Amp  
Fuel Pump, Alarm System
- \* 3 - 10 Amp  
Courtesy Lights, Oil Level Sensor
- \* 4 - Not Used (1993-95)
- \* 4 - 10 Amp (1996)  
Electronic Start Inhibitor (Immobilizer)
- \* 5 - 30 Amp  
ECC Blower (Speed 4)
- \* 6 - 25 Amp  
Central Locking System, Alarm
- \* 7 - 15 Amp  
Audio System (Amplifier)


- \* 8 - 25 Amp (1993-95)  
Power Antenna, Trailer Connector
- \* 8 - 40 Amp (1996)  
Electronic Start Inhibitor (Immobilizer)
- \* 9 - 30 Amp  
ABS, Traction Control System
- \* 10 - Not Used (1993-95)
- \* 10 - 15 Amp (1996)  
Heated Rear Seat (If Equipped)
- \* 11 - 30 Amp  
Heated Rear Window & Side Mirrors
- \* 12 - 10 Amp  
Brake Lights
- \* 13 - 15 Amp  
Hazard Flashers, Headlight Flashers, Alarm
- \* 14 - 30 Amp  
ABS, Traction Control System
- \* 15 - 10 Amp (1993-95)  
Audio System, Courtesy Lights, Door Open Light, Trunk Light,  
Glove Box Light, Remote Control Central Locking System,  
Oil Level Sensor, Seat Belt Reminder
- \* 15 - 10 Amp (1996)  
Audio System, Courtesy Lights, Door Open Light, Trunk Light,  
Glove Box Light, Remote Control Central Locking System,  
Oil Level Sensor, Seat Belt Reminder, Data Link Connector
- \* 16 - 30 Amp (1993-95)  
Accessories
- \* 16 - 30 Amp (1996)  
Power Antenna, Trailer Connector, Accessories
- \* 17 - 10 Amp  
Key Reminder
- \* 18 - 25 Amp (1993-95)  
Heated Front Seats, Power Mirrors
- \* 18 - 15 Amp (1996)  
Front Fog Lamps
- \* 19 - 15 Amp  
Left High Beam Headlight
- \* 20 - 15 Amp  
Right High Beam Headlight, High Beam Indicator
- \* 21 - 15 Amp  
Left Low Beam Headlight
- \* 22 - 15 Amp  
Right Low Beam Headlight
- \* 23 - 10 Amp  
Left Parking Light, License Light
- \* 24 - 10 Amp  
Right Parking Light, Bulb Failure Warning Sensor
- \* 25 - 10 Amp  
Rear Fog Lamps, Fog Lamp Indicator
- \* 26 - Not Used (1993-95)
- \* 26 - 25 Amp (1996)  
Heated Front Seats, Power Mirrors
- \* 27 - 15 Amp  
Back-Up Lights, Turn Signals
- \* 28 - 10 Amp  
Cruise Control, Heated Rear Window, Seat Belt Reminder Light,  
Shiftlock, Bulb Failure Warning Sensor, Heated Rear Seat
- \* 29 - 15 Amp  
ABS, Traction Control System
- \* 30 - 10 Amp  
Cigarette Lighter
- \* 31 - 25 Amp  
ECC, ECC Blower (Speeds 1-3)

- \* 32 - 10 Amp  
Audio System, Remote Controlled Central Locking System
- \* 33 - 15 Amp (1993-95)  
Power Seats, OBD Test Socket, Tailgate Washer/Wipe (Wagon)
- \* 33 - 15 Amp (1996)  
Power Seats, Tailgate Washer/Wipe (Wagon)
- \* 34 - 25 Amp  
Windshield Wiper/Washer, Horn, Headlight Washer/Wiper
- \* 35 - 10 Amp  
Instrument Lights, Sun Roof, Traction Control System
- \* 36 - Not Used
- \* 37 - Circuit Breaker  
Power Windows, Power Sun Roof
- \* 38 - Not Used
- \* 39 - Circuit Breaker  
Drivers Power Seat
- \* 40 - Circuit Breaker  
Passengers Power Seat

## RELAY PANEL LOCATION

The relay panel is located at the left corner of the instrument panel.

## RELAY PANEL IDENTIFICATION

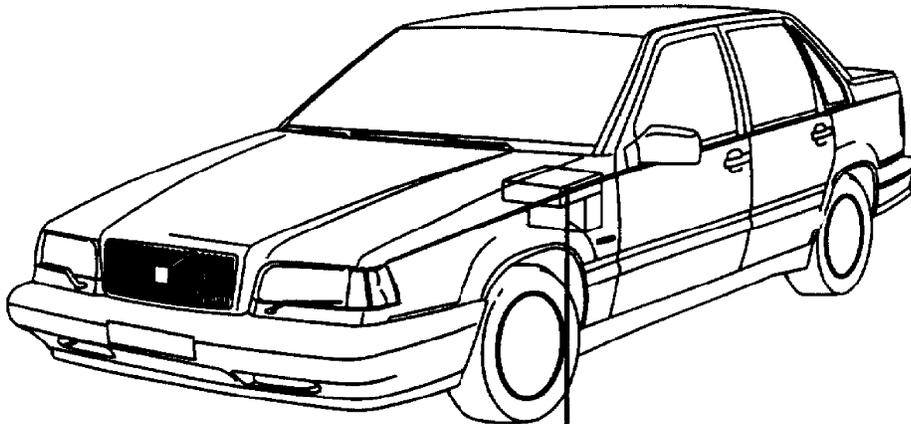

50B11925

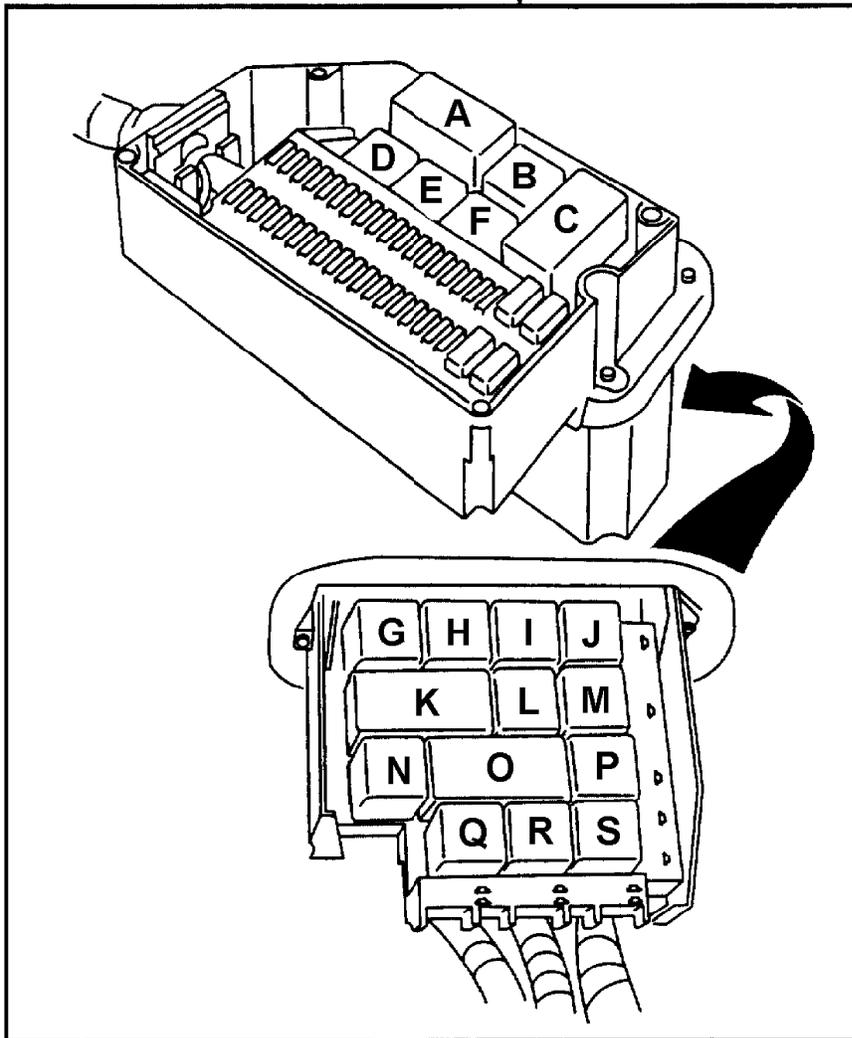


Fig. 2: Relay Panel Identification  
Courtesy of Volvo Cars of North America.

- \* A - Control Module, Cruise Control
- \* B - Fuel Pump Relay

- \* C - Main Headlight Relay with Bulb Malfunction Indicator
- \* D - Overload Relay (+X Supply)
- \* E - Overload Relay (+15 Supply)
- \* F - Overload Relay (+X Supply)
- \* G - Oil Level Sensor Control Module (or Lamp Monitor)  
(1993-95), Fog Lamp Relay (1996)
- \* H - Deadlock Setting Relay
- \* I - Intermittent Windshield Wiper Relay
- \* J - Intermittent Wiper Relay (Rear Tailgate - Wagon)
- \* K - Central Lock and Delayed Inside Lighting Relay
- \* L - Speed Warning Relay
- \* M - Heated Rear Window and Door Mirror Relay
- \* N - Not Used
- \* O - Anti-Theft Alarm Relay
- \* P - Seat Belt Reminder/Key Warning Relay
- \* Q - Parking Position Lock (1993-95)  
Front Fog Lamp Relay (Bridged if not equipped) (1996)
- \* R - Heated Rear Seat Relay
- \* S - Not Used